

# LEVEL TEST

**Read all instructions before use. Use this Purifier only as intended and as described in the Use & Care Guide**

*To ensure maximum operating efficiency and optimum water quality, always operate Purifier on a flat, level, stable heating surface. If Purifier is not level, performance may be impaired.*

*If the collection cup has been inadvertently bent, purified water will not flow out of the boiler. Purified water will drip back into the boiler and **NOT** out of the collection tube as designed.*

## To Test:

Remove water coolant tray assembly from the boiler. Slowly pour water into level collection cup.

Water should flow evenly around collection cup and out of the collection tube without overflowing and running into the boiler. If it does not, adjust the collection cup so that the water can easily flow downward out of the cup to the outside of the boiler.

The collection cup assembly **MUST REMAIN LEVEL** and collection tube must run at a downward slope into the collection/storage container.

**DO NOT** remove collection cup assembly. Removal of this component may cause the rubber grommet to be cut, or may cause the collection cup to become bent so that the purified water will no longer flow downward out of the boiler.

