

# Boiler/Kettle Lid Gasket Installation

1. Remove lid assembly from boiler/kettle.
2. Remove and discard old gasket.
3. Turn lid assembly **upside down** (Figure 1).
4. **Reverse gasket** (flip inside out) with flaps facing down (Figure 2).

5. Stretch ribbed side of gasket, with flaps facing down and out, around stainless part of lid (Figure 3). Ensure gasket is flat around lid flange (**not twisted**) and that flaps are facing down and out (Figure 4).

6. Replace lid assembly on boiler/kettle.

**NOTE:** Should you need to reposition/remove gasket, carefully place small, flat screwdriver between gasket and kettle lid, taking care not to cut or tear gasket.

Figure 1

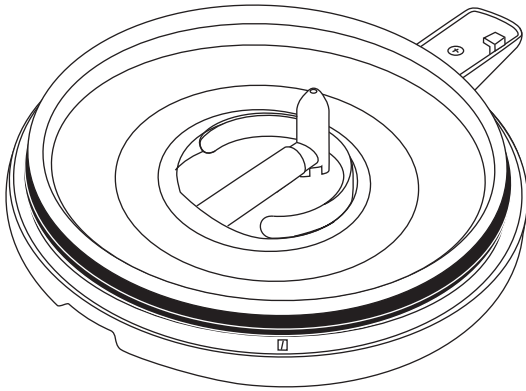


Figure 2

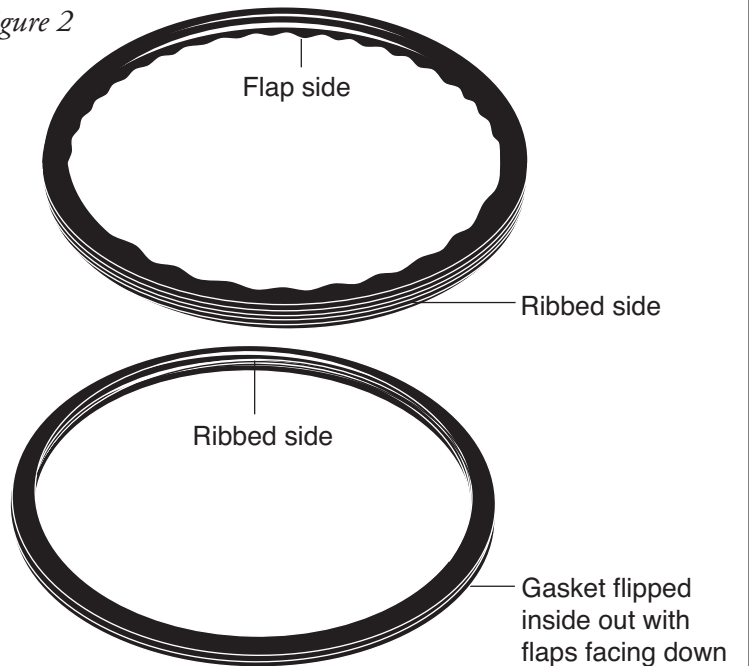


Figure 3


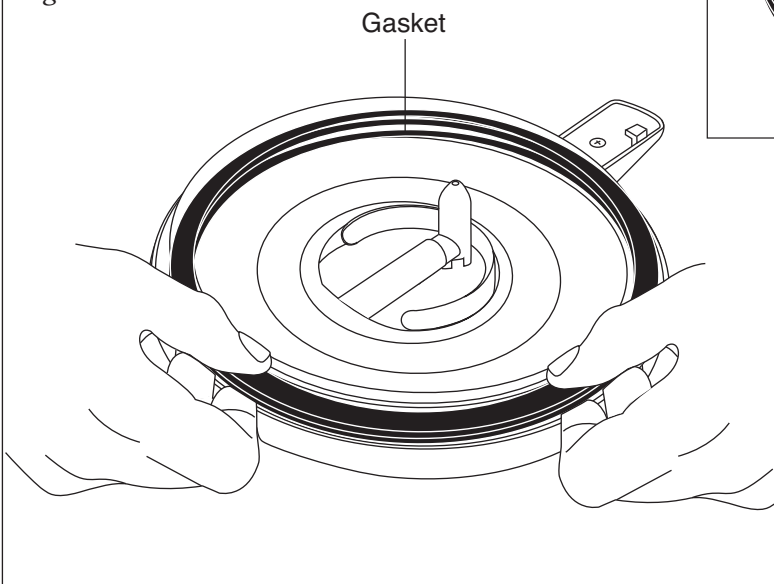


Figure 4



**INCORRECT**

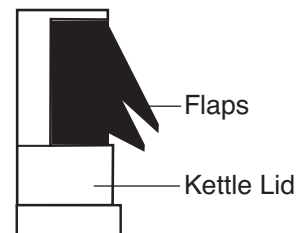

**CORRECT**