

# CHANGING THE CARBON FILTER BAG

**IMPORTANT:** Purifier uses a carbon filter in the carafe cover to remove traces of odors before purified water is collected in carafe. The filter lasts about 2-3 months. A return of unwanted odor means filter should be replaced. Order replacement carbon filters from the outlet where you purchased your Purifier.

## To Replace Carbon Filter

The carbon filter is a final “polishing” filter for the Purifier. Unit may be operated with or without the carbon filter. Remove the cover from the carafe. Remove carbon compartment cover by pulling on tabs. Remove used carbon filter and discard. **DO NOT** reuse carbon filter. Rinse inside of carbon compartment and carafe cover with water. Remove filter from plastic bag.

## Carbon Filter Preparation (Handle filter bag carefully to prevent tearing.)

Wash your hands with soap and warm water. Fill a clean container with distilled or boiled tap water. Slowly immerse a narrow end of the filter bag into the water. Once the bottom quarter (1/4) is wet, slowly immerse entire bag, squeezing gently to remove air. If the bag “puffs up,” you are immersing it too quickly. Once bag has been immersed, remove from the water and rinse it by pouring more distilled water over bag to remove any carbon fines (dust). Be sure carbon is evenly distributed within bag, then place bag in filter housing. Replace cover on housing, and place cover on carafe. Place carafe on base unit.

**Reset the Filter Status Bar** by pressing and holding the “Delay” button for 7 seconds. The next time you make purified water, discard the first batch which may have small, harmless carbon fines in it.

