

Boiler/Kettle Lid Gasket Installation

1. Remove lid assembly from boiler/kettle.
2. Remove and discard old gasket.
3. Turn lid assembly **upside down** (Figure 1).
4. Stretch ribbed side of gasket, with flaps facing down and out, around stainless part of lid (Figure 2).

Ensure gasket is flat around lid flange (**not twisted**) and that flaps are facing down and out (Figure 3).

5. Replace lid assembly on boiler/kettle.

NOTE: Should you need to reposition/remove gasket, carefully place small, flat screwdriver between gasket and kettle lid, taking care not to cut or tear gasket.

Figure 1

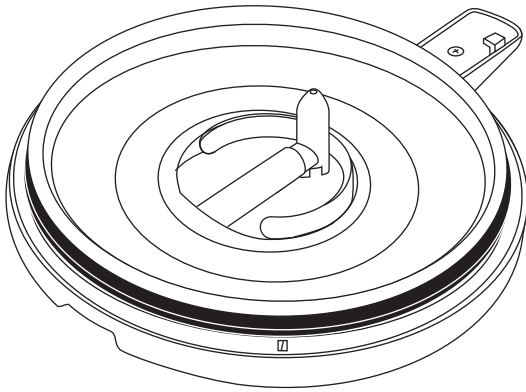


Figure 2


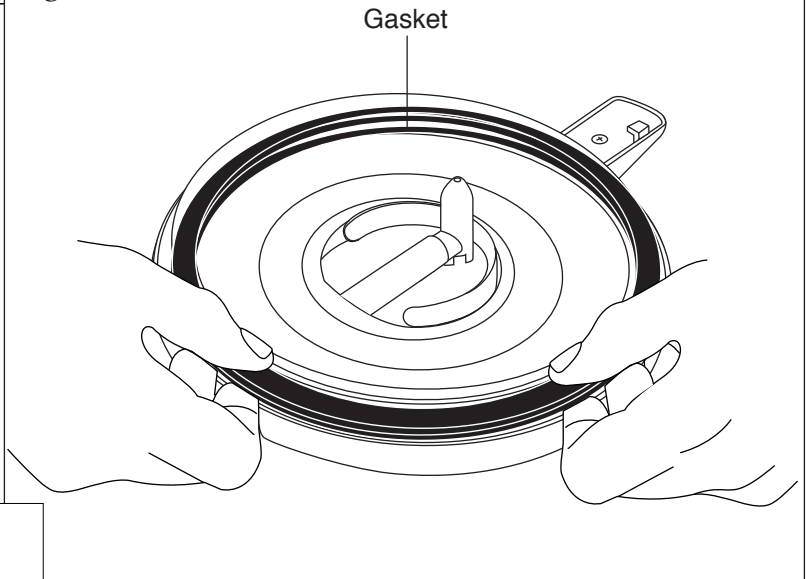


Figure 3



INCORRECT

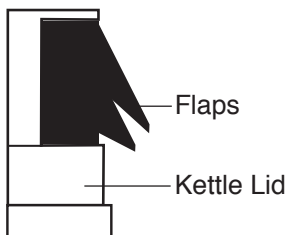

CORRECT