


USE & CARE GUIDE

Airlite® Air Purifier

Portable

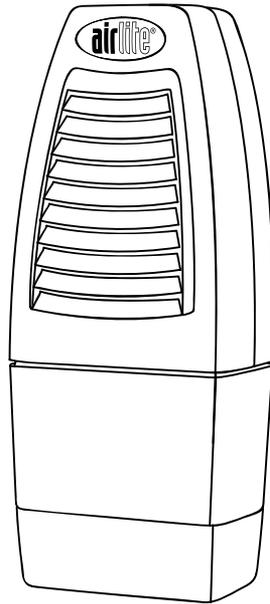

See important safeguards on page 3



An exclamation point within an equilateral triangle is intended to alert user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



A lightning bolt within an equilateral triangle is intended to alert user to risk of injury from electric shock.



IMPORTANT SAFEGUARDS

A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. When using this appliance, always adhere to basic safety precautions including:

READ ALL INSTRUCTIONS BEFORE USE.

1. **DO NOT** use this appliance outdoors. To reduce the risk of electric shock, **DO NOT** expose this appliance to rain or moisture. For indoor use only.
2. Keep out of reach of children. This is not a toy! The purifier is an electrical device. Adult supervision is required when operating in the presence of children.
3. Plug the cordless purifier directly into a 120 volt electrical outlet only. If purifier does not hold firmly to wall outlet, your electrical outlet may need servicing. Consult with a qualified electrician for assistance. **DO NOT** modify plug in any way.
4. **DO NOT** operate with a damaged plug, after a malfunction or if the purifier has been damaged in any manner. Return to an authorized dealer or authorized service facility for repair or replacement.
5. **DO NOT** tamper with the housing or attempt to repair the purifier. There are **NO** user serviceable parts inside. If servicing becomes necessary, please contact your authorized dealer or an authorized service facility.
6. **DO NOT** use the purifier with an extension cord. Designed for wall outlet use **ONLY**.
7. Unplug from wall outlet before changing the lamp module.
8. **DO NOT** use appliance for other than intended use.
9. **DO NOT** allow foreign objects to enter the intake and outlet openings as this may cause electric shock or damage to the purifier. **DO NOT** block air intake or outlet openings.
10. **DO NOT** operate this appliance in any area where there is risk of the unit falling into or being exposed to water.



CAUTION!


To reduce the risk of electrical shock, **DO NOT** disassemble. **NO** user serviceable parts inside. Refer servicing to qualified service personnel.

The Airlite Purifier is not a medical device.

DO NOT stop or alter any medical therapy programs or medications without the advice of your physician.

HOW IT WORKS

Airlite uses humidity from the air to create a photocatalytic reaction between the germicidal UV lamp and multi-metallic and titanium dioxide coatings on the target area of the lamp module. This reaction produces hydroxyl radicals and superoxide ions. As they are emitted into the room they destroy microorganisms like bacteria and viruses and oxidize odors, fungi, mold, parasites and toxic chemical gases.

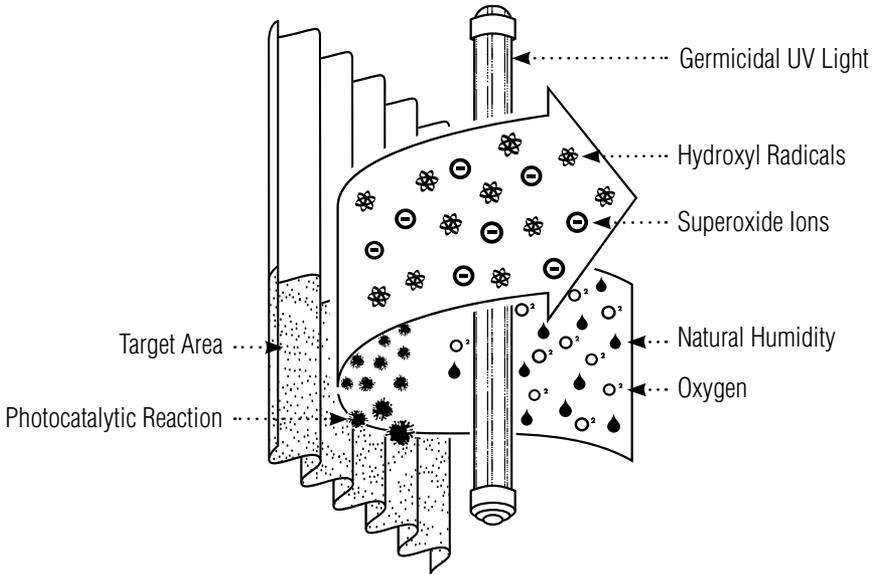

INSTALLATION/OPERATION

Plug Airlite into a standard 120 volt wall outlet only. For convenient positioning, it may be turned either up or down to plug into power source (see bottom page 5). Airlite will automatically begin to operate and the lamp module will illuminate. To insure proper air flow, keep the surrounding area free of clutter.

To discontinue use, unplug Airlite from the wall outlet. Firmly grip the base of the unit and gently pull from the outlet.

Airlite is most effective in treating small, open areas up to 350 sq. ft. Performance may vary according to atmospheric and/or environmental conditions such as altitude, relative humidity, air movement, severity of existing odor and size of area treated. Under proper operating conditions, Airlite will cause the air to smell clean and fresh.

SAVE THESE INSTRUCTIONS

SPECIFICATIONS

Dimensions	Height:	8.25" (21cm)
	Width:	3.25" (8 cm)
	Depth:	2.50" (6 cm)
	Weight:	13 oz (0.34 kgs)
	UV Output:	8 microwatts per sq cm
Electrical Rating:	120 Volt, 60 Hz, 6 Watts, 0.1 Amp	

Made in USA with UL Listed Parts

MAINTENANCE

Cleaning: Unplug the unit from electrical outlet and use a damp cloth to remove dust that may accumulate. **DO NOT** use harsh detergents or abrasives. **DO NOT** spray water or cleaners directly on the unit.





WARNING!


Airlite contains **NO** serviceable parts. **DO NOT** attempt to open the housing or service in any way.

Replacing the Lamp Module: To maintain best performance, the lamp module should be replaced after approximately 18-24 months.


To replace the lamp module, unplug Airlite from the wall outlet. Firmly grip the base with one hand and the lamp module with the other, and pull apart until the lamp module unplugs from the base. Discard the used lamp module by following the recommended disposal procedure for a used fluorescent bulb.

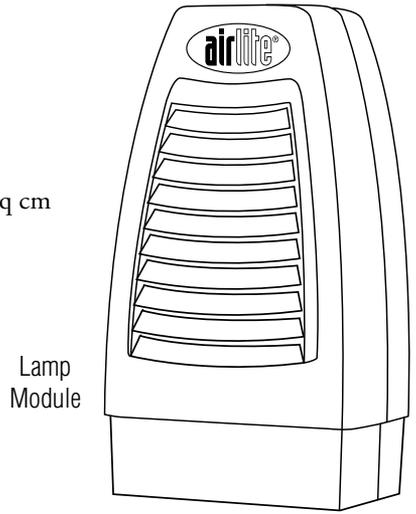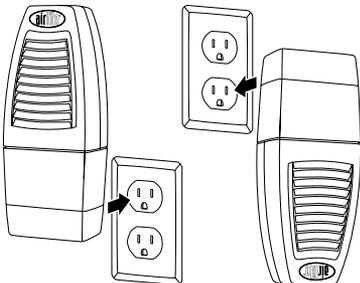

Lamp Module

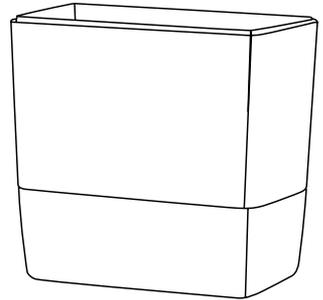

Base (front)

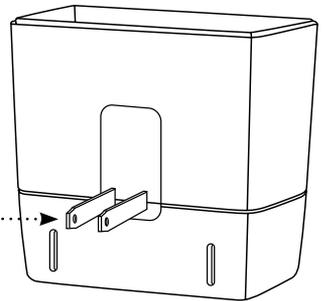

Base (back)

Plug

Firmly grip the base with one hand and the new lamp module with the other. Align the two components and push them securely together.

QUESTIONS & ANSWERS

Q: Does my Airlite need to run all the time?

A: No. You can use your portable Airlite as needed in various locations.

Q: Is there any maintenance required?

A: No. Simply replace the lamp module when scheduled.

Q: What about my clothes? Can I eliminate dry cleaning odors or smoke smell?

A: Yes. Place Airlite in a closet with dry-cleaned or smoke-filled garments for about 8 hours with the door closed.

Q: Does the technology help with pet odor?

A: Yes. It not only removes pet odors, but will help drop pet dander out of the air.

TROUBLESHOOTING TIPS

If you suspect a problem, check the following:

- Purifier is plugged in properly
- The wall outlet is active
- Lamp module correctly installed

SERVICE

Contact qualified personnel for repair if the troubleshooting tips fail.

WHERE TO USE

Homes & living areas	Kitchens
Offices & stores	Attics
Shoe repair shops	Closets
Barbershops	Laundry rooms
Medical offices	Bathrooms
Day care centers	Basements
Smoking areas	Bedrooms
Hair & nail salons	Locker rooms
High pollen environments	Hotel rooms
Hospital & nursing home rooms	Boats
Veterinary offices & kennels	Recreational vehicles
Photo labs	And more...

This product has been packaged in recycled material. Our goal is to provide the best possible packaging while ensuring the future of generations to come.

WARRANTY REGISTRATION CARD

Please fill out and return the enclosed registration card within twenty days of purchase. Returning this card will not affect warranty coverage, but may expedite the processing of a warranty claim. Returning this card is the only way to guarantee you will be notified of any issues that arise concerning this product. The additional information will also help us to develop new products that best meet your needs. Thank you!

OWNER'S LIMITED WARRANTY

Airwise warrants, to the original purchaser, this product against defects in materials and workmanship excluding the replaceable lamp module, for a period of three (3) years from the date of purchase. The lamp module is warranted against defects in materials and workmanship for one (1) year prorated from the date of purchase. Defects or failures due to shipping/handling, improper use or maintenance, including abuse or neglect, normal wear, accidents, alterations or modifications, or unauthorized repair are specifically excluded from this warranty. No dealer, distributor, agent, representative, or other person is authorized to extend or expand this warranty.

Airwise is not responsible or liable for personal injury, property damage, or incidental or consequential damages arising out of, or in connection with, the use or performance of the product or other damages with respect to loss of use, or costs of removal, installation, or reinstallation.

Airwise will, at its option, replace or repair the defective part(s) without charge, provided they are returned, transportation prepaid by owner, to an authorized service facility or to the address below. Enclose a letter describing the problem, copy of dated proof of purchase, and your name, address and daytime telephone number.

This limited warranty does not guarantee uninterrupted service. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. This limited warranty is in lieu of all other warranties, expressed or implied, including, but not limited to, any implied warranty of merchantability or fitness for a particular use or purpose. This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province.

Outside the United States, a different warranty may apply. For details, please contact your authorized Airlite distributor.



3608 Parkway Blvd • Leesburg Florida 34748-9399
(352)787-5008 • Fax (352)787-8123